


“UPDATED”
“ACTUALIZADO”
«Mise à jour»

Thermador\
de Thermador

Pro Grand Range
Estufa Pro
Cuisinière Pro Grand


Door Installation Guide
Guía de instalación de la puerta
Guide d'installation de porte

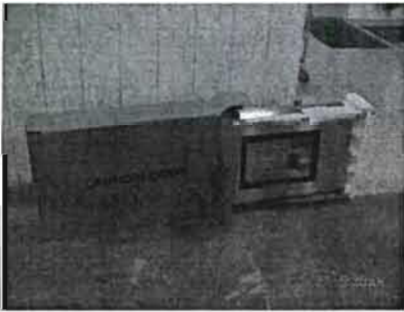

1) Remove the door from the carton. **Note:** Door is heavy, be careful not to damage or scratch the floor *and* the door. Use a blanket or the cardboard packing.

1) Saque la puerta de la caja de cartón. **Nota:** La puerta está pesada, tenga cuidado para no dañar o rayar el piso y la puerta. Use una cobija o la misma caja de cartón.


1) Retirer la porte du carton. **Remarque** la porte est lourde, faire attention à ne pas l'endommager ni le plancher. Utiliser une couverture ou l'emballage cartonné.

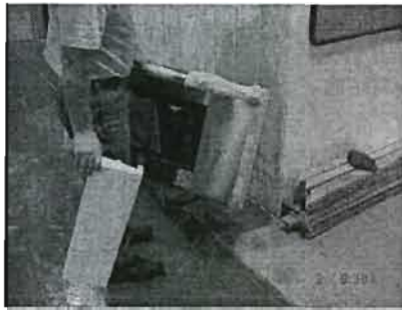

2) Remove the packaging and protective plastic from the door.

2) Quite el material de embalaje y las cubiertas de plástico de la puerta.


2) Retirer l'emballage et le plastique de protection de la porte.

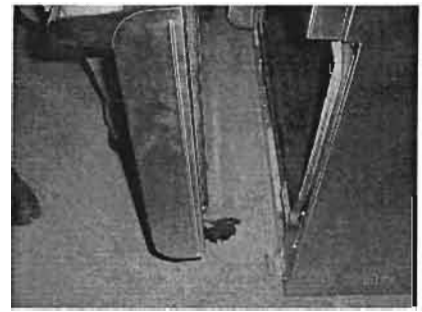

3) Using your leg to steady the door, hold the door at an angle and insert the latches into the receivers so the latches hook into the receivers on each side.

3) Usando sus piernas para sujetar la puerta, sostenga la puerta a un ángulo e inserte los pestillos en los receptores hasta que queden enganchados en los receptores de cada lado.


3) Utiliser la jambe pour équilibrer la porte, la tenir à un angle et insérer les loquets dans les réceptacles afin qu'ils s'enclenchent de chaque côté.

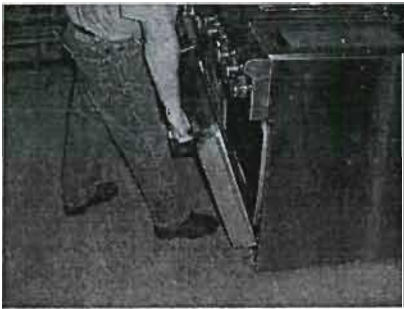

4) Make sure the latches are hooked into the latch receivers. Do not bend or twist the door if one side does not go into the receiver.

4) Asegúrese de enganchar los pestillos en los receptores. Si uno de los lados no entra en el receptor, no doble o tuerza la puerta.


4) S'assurer que les loquets sont bien enclenchés dans les réceptacles. Ne pas plier ni tordre la porte si un des côtés ne s'insère pas.

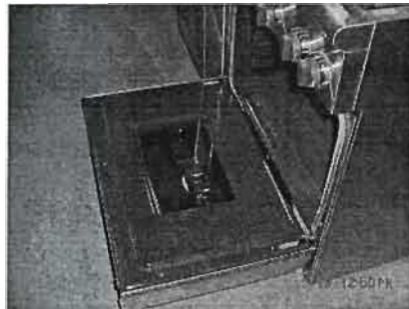

5) Pull the door open.

5) Jale la puerta para abrirla.

5) Ouvrir la porte.

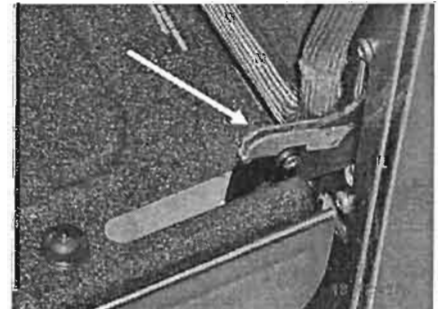

6) In the down position, the hinge should look as illustrated in the photo above.

6) En la posición abierta, la bisagra debe aparecer como se muestra en la foto de arriba.

6) En position abaissée, la charnière doit être comme illustrée ci-dessus.

**“UPDATED”
“ACTUALIZADO”
«Mise à jour»**

**Thermador\
de Thermador**

**Pro Grand Range
Estufa Pro
Cuisinière Pro Grand**


**Door Installation Guide
Guía de instalación de la puerta
Guide d'installation de porte**



7) Using a screw driver, push the latch keeper into the slot on the front chassis on both sides. Take care not to scratch the range.

7) Usando un destornillador, empuje el cerrojo a la ranura en el bastidor delantero en ambos lados. Tenga cuidado para no rayar la estufa.


7) À l'aide d'un tournevis, pousser le protège loquet dans la fente sur le boîtier avant, des deux côtés. Attention à ne pas égratigner la cuisinière.

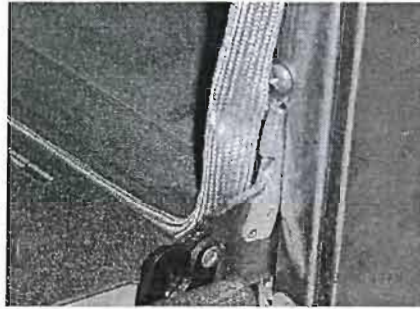

8) Latch keepers should be fully embedded into the slot.

8) Los cerrojos deben quedar totalmente empotrados en la ranura.

8) Les protège loquets doivent être bien insérés dans les fentes.

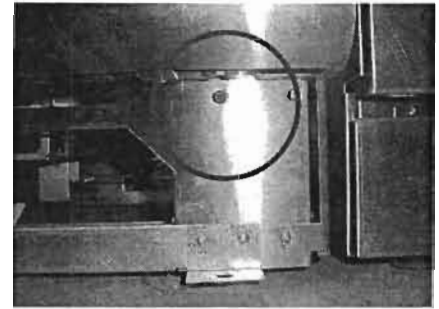

9) Close the door to make sure there is no binding. Make sure the door is level. If not use the adjustment screw under the door as shown above.

9) Cierre la puerta para asegurar que encaja bien. Asegúrese que la puerta está nivelada. De lo contrario, use el tornillo de ajuste debajo de la puerta como se muestra arriba.

9) Fermer la porte pour s'assurer qu'elle ne plie doit être de niveau. Sinon, utiliser la vis de réglage de la porte, comme illustré ci-dessus.

STATEMENT OF LIMITED PRODUCT WARRANTY

Thermador®

What this Warranty Covers & Who it Applies to: The limited warranty provided BSH Home Appliances "Thermador" in this Statement of Limited Product Warranty applies only to the Thermador ("Product") sold to you, the first using purchaser, provided that the Product was purchased: (1) for your normal, household (non-commercial) use, and has in fact at all times only been used for normal household purposes; (2) new at retail (not a display, "as is", or previously returned model), and not for resale, or commercial use; and (3) within the United States or Canada, and has at all times remained within the country of original purchase. The warranties stated herein apply only to the first purchaser of the Product and are not transferable.

- Please make sure to return your registration card; while not necessary to effectuate warranty coverage, it is the best way for Thermador to notify you in the unlikely event of a safety notice or product recall.

How Long the Warranty Lasts: Thermador warrants that the Product is free from defects in materials and workmanship for a period of Three hundred and sixty days (360) days from the date of purchase. The foregoing timeline begins to run upon the date of purchase, and shall not be stalled, tolled, extended, or suspended, for any reason whatsoever.

Repair/Replace as Your Exclusive Remedy: During this warranty period, Thermador or one of its authorized service providers will repair your Product without charge to you (subject to certain limitations stated herein) if your Product proves to have been manufactured with a defect in materials or workmanship. If reasonable attempts to repair the Product have been made without success, then Thermador will replace your Product (upgraded models may be available to you, in Thermador's sole discretion, for an additional charge). All removed parts and components shall become the property of Thermador at its sole option. All replaced and/or repaired parts shall assume the identity of the original part for purposes of this warranty and this warranty shall not be extended with respect to such parts. Thermador's sole liability and responsibility hereunder is to repair manufacturer-defective Product only, using a Thermador-authorized service provider during normal business hours. For safety and property damage concerns, Thermador highly recommends that you do not attempt to repair the Product yourself, or use an un-authorized service; Thermador will have no responsibility or liability for repairs or work performed by a non-authorized service. If you choose to have someone other than an authorized service provider work on your Product, **THIS WARRANTY WILL AUTOMATICALLY BECOME NULL AND VOID.** Authorized service providers are those persons or companies that have been specially trained on Thermador products, and who possess, in Thermador's opinion, a superior reputation for customer service and technical ability (note that they are independent entities and are *not* agents, partners, affiliates or representatives of Thermador. Notwithstanding the foregoing, Thermador will not incur any liability, or have responsibility, for the Product if it is located in a remote area (more than 100 miles from an authorized service provider) or is reasonably inaccessible, hazardous, threatening, or treacherous locale, surroundings, or environment; in any such event, if you request, Thermador would still pay for labor and parts and ship the parts to the nearest authorized service provider, but you would still be fully liable and responsible for any travel-time or other special charges by the service company, assuming they agree to make the service call.

Out of Warranty Product: Thermador is under no obligation, at law or otherwise, to provide you with any concessions, including repairs, pro-rates, or Product replacement, once this warranty has expired.

Warranty Exclusions: The warranty coverage described herein excludes all defects or damage that are not the direct fault of Thermador, including without limitation, one or more of the following: (1) use of the Product in any other than its normal, customary and intended manner (including without limitation, any form of commercial use, use or storage of an indoor product outdoors, use of the Product in conjunction with air or water-going vessels); (2) any party's willful misconduct, negligence, misuse, abuse, accidents, neglect, improper operation, failure to maintain, improper or negligent installation, tampering, failure to follow operating instructions, mishandling, unauthorized service (including self-performed "fixing" or exploration of the appliance's internal workings); (4) adjustment, alteration or modification of any kind; (5) a failure to comply with any applicable state, local, city, or county electrical, plumbing and/or building codes, regulations, or laws, including failure to install the product in strict conformity with local fire and building codes and regulations; (6) ordinary wear and tear, spills of food, liquid, grease accumulations, or other substances that accumulate on, in, or around the Product; and (7) any external, elemental and/or environmental forces and factors, including without limitation, rain, wind, sand, floods, fires, mud slides, freezing temperatures, excessive moisture or extended exposure to humidity, lightning, power surges, structural failures surrounding the appliance, and acts of God. In no event shall Thermador have any liability or responsibility whatsoever for damage to surrounding property, including cabinetry, floors, ceilings, and other structures or objects around the Product. Also excluded from this warranty are scratches, nicks, minor dents, and cosmetic damages on external surfaces and exposed parts; Products on which the serial numbers have been altered, defaced, or removed; service visits to teach you how to use the Product, or visits where there is nothing wrong with the Product; correction of installation problems (you are solely responsible for any structure and setting for the Product, including all electrical, plumbing or other connecting facilities, for proper foundation/flooring, and for any alterations including without limitation cabinetry, walls, floors, shelving, etc.); and resetting of breakers or fuses. **TO THE EXTENT ALLOWED BY LAW, THIS WARRANTY SETS OUT YOUR EXCLUSIVE REMEDIES WITH RESPECT TO PRODUCT, WHETHER THE CLAIM ARISES IN CONTRACT OR TORT (INCLUDING STRICT LIABILITY, OR NEGLIGENCE) OR OTHERWISE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESS LIMITED WARRANTY IS EFFECTIVE. IN NO EVENT WILL THE MANUFACTURER BE LIABLE FOR CONSEQUENTIAL, SPECIAL, INCIDENTAL, INDIRECT, "BUSINESS LOSS", AND/OR PUNITIVE DAMAGES, LOSSES, OR EXPENSES, INCLUDING WITHOUT LIMITATION TIME AWAY FROM WORK, HOTELS AND/OR RESTAURANT MEALS, REMODELLING EXPENSES IN EXCESS OF DIRECT DAMAGES WHICH ARE DEFINITELY CAUSED EXCLUSIVELY BY Thermador, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. No attempt to alter, modify or amend this warranty shall be effective unless authorized in writing by an officer of BSH.**

How to Obtain Warranty Service: To obtain warranty service for your Product, you should contact the nearest Thermador [800-735-4328] authorized service center.


Thermador®
BSH Home Appliances Corp.

5551 McFadden Avenue, Huntington Beach, CA 92649 USA • (800) 735-4328
ECO 5U00J0 • 9000087172 Rev. A • © 2005 BSH Home Appliances Corp. • Litho U.S.A. 5/05

Thermador®

HANDY HINTS

FOR PROFESSIONAL COOKTOPS AND RANGES

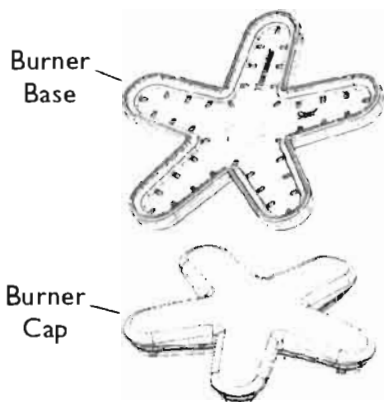

Star™ Burner Components


Burner Cap and Igniter Cleaning and Alignment

Cleaning

After washing burner cap, be sure to dry thoroughly. Hold cap firmly in one hand and shake sharply against other hand to dislodge water from all ports. Repeat if necessary.

Clean igniters gently by removing any soil with a toothpick or damp (not wet) cotton swab.

When reinstalling the burner caps, be sure they seat snugly onto the burner base. If the burner cap is not seated correctly, the flame will burn unevenly, and/or igniters will continue sparking when trying to light the gas.

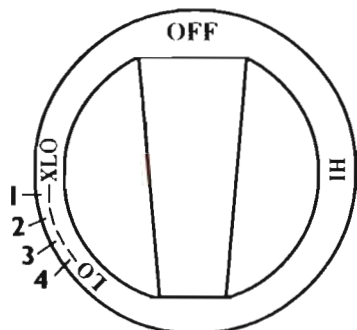


Extra Low® Knobs

Extra Low® Knobs

(The number and dash designations, shown in the drawing, are for reference only. They do not actually appear on the knob) The two far-left Cooktop control knobs have graphics indicating the Extra Low® feature, which allows you to select low heat settings needed to simmer or cook delicate foods. Between LO and XLO® on the knob, the flame will automatically cycle **OFF**. Based on a one-minute cycle, at XLO® the flame will be **ON** about 8 seconds and **OFF** 52 seconds. Just below LO the flame will be **ON** about 52 seconds and **OFF** 8 seconds. When the automatic ignition turns the flame **ON**, the igniter will click; this is a normal operational characteristic of the Extra Low® feature.

The indicator light located between the knobs on the control panel will illuminate whenever either corresponding gas surface burner is turned on.

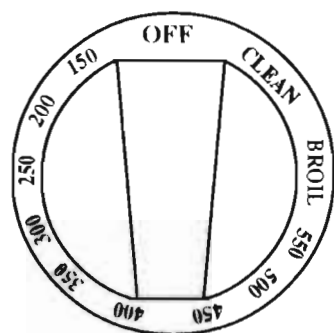

Oven Control Knob

Oven Control Knob

Before selecting the desired temperature, turn the selector switch to the appropriate cooking mode.

To select the proper oven temperature, turn the oven knob to the exact temperature desired. When broiling in the oven, the control knob must be turned to the Broil stop position for the broiler to ignite. The oven door must be closed when broiling in the oven, whether gas or electric.


When self-cleaning, turn the selector switch and the oven control knob to Clean. The oven door will automatically lock and cannot be opened until the end of the four-hour cleaning cycle. (Note: the 12-inch oven in the 48-inch range does not have the self-cleaning feature.)

Backsplash



Backsplash

During high temperature cooking on the cooktop, areas of the backsplash near the range or cooktop may turn a yellowish or bluish color. This is due to the high heat. The color can be removed by following the directions on Zud®, Barkeepers Friend® or Siege Stainless Steel Cleaner. Be sure to rub in the direction of the grain, rinse with clear water and dry.

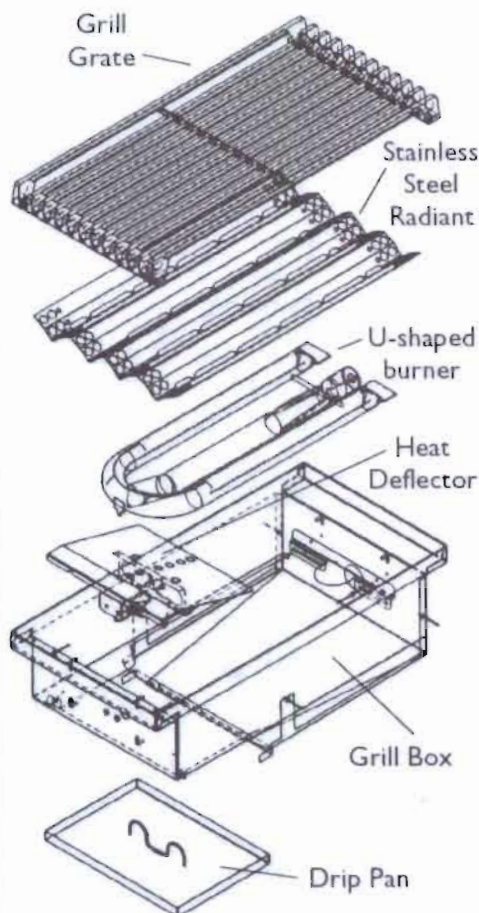

Grill Disassembled


Cleaning

After using the grill for cooking, operate an extra 20 minutes to burn off the grease on the stainless steel radiant. When cold, remove the grate, stainless steel radiant, double U-shaped burner, heat shield and drip pan for cleaning. Be sure all gas ports on the burner and the venturi are open and free of debris that may prohibit gas flow.

Reassembly:

The double U-shaped burner must be positioned correctly for safe operation.


1. Install the stainless steel rectangular drip pan inside the grill box as shown.
2. Install the heat deflector on grease drip pan to handle and pins in front of the box.
3. Insert the end of the burner into the slots at the back of the grill box.
4. Insert the tab on the front of the burner into slot in the heat deflector.
5. Place the stainless steel radiant on the two studs on each end of the grill can.
6. Replace the grill grate, with raised food containment rail oriented towards the grill box rear.

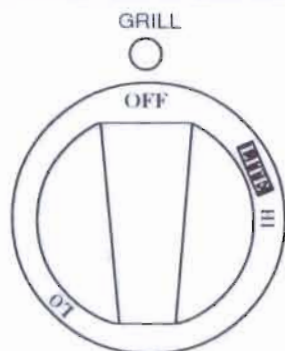

Grill Control Knob

Grill Control Knob

The grill must be ignited by pushing in and turning the grill control knob counter-clockwise (to the left) to the LITE/Hi position. The spark igniter will immediately spark and the grill burner will ignite in 4-10 seconds. If the flame does not ignite within this time, turn the knob back to the OFF position, wait 5 minutes, and then repeat the lighting procedure. After the grill flame becomes apparent, preheat for 10-15 minutes. The grill knob may then be set to the desired flame height by turning the knob to any position between LO and HI.

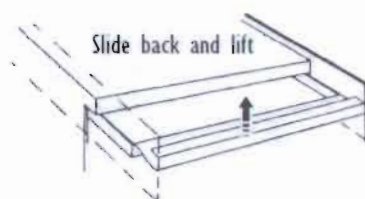

Griddle Grease Tray
Titanium Coated Aluminum

Griddle with Grease Pan

The griddle comes with a non-stick surface that is ready to use after washing in warm, soapy water. Rinse to remove any traces of soap. The griddle is now ready to use. No shortening or oil is required but may be used to add flavor to foods. Metal utensils may be used but care should be taken to avoid scratching or gouging the surface.

Once cooking grease has solidified, remove griddle grease pan. Lift up front edge and slide out for cleaning. The grease pan may be washed in the dishwasher after grease removal.

Thermador[®]

5551 McFadden Avenue, Huntington Beach, CA 92649 • 800/735-4328
RO 8608-A • 5040004167 • © 2002 BSH Home Appliances Corp. • Litho U. S. A. 1/02